



DIAMONDBACK

DiamondBackCovers.com / 800 935 4002

SHIM KIT

INSTALLATION GUIDE

MISC-4

5 minutes
Normal install time

Keep an eye out for these icons:

! IMPORTANT!
Important installation information

★ Helpful Hints
Tips to assist installation

PARTS INCLUDED:



5" Shims (2)

WHY A SHIM KIT?

If you place a heavy load at the rear of your DiamondBack HD, you may find it difficult to open and close the tailgate. These shims take the load off the tailgate so you can operate it even with heavy load on top.

INSTRUCTIONS



1 Open the tail panel of the cover.

2 Place a **shim** onto each bed rail, tight against the inside of the tailgate.

3 Close the cover.

4 If the lock rods can no longer travel unimpeded past the bed rail lips, drop the tailgate and use a 7/16" socket to lower the rod guide brackets and thus reposition the rods.

★ For best weather protection, make sure that in the closed position, the rods draw the tailgate panel down and compress its perimeter weatherstrip.

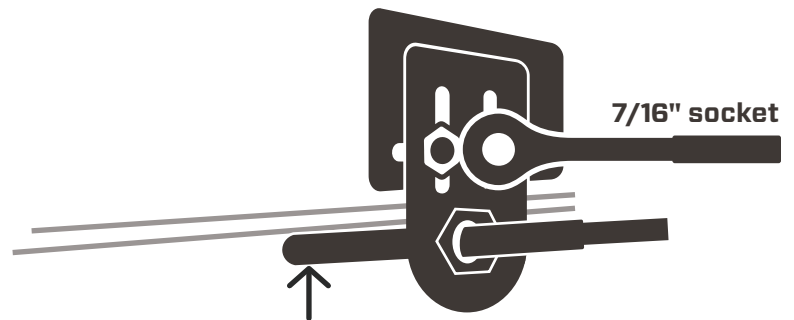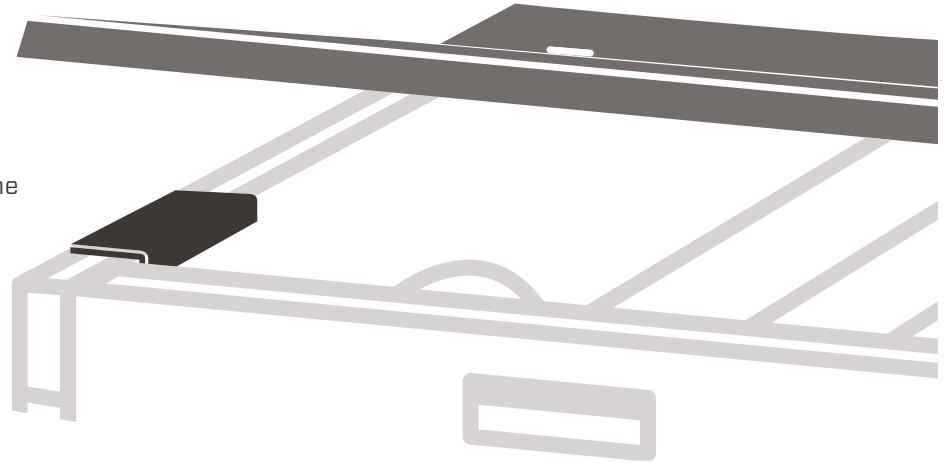

7/16" socket